


IntelliStage™

Equipment and Wheelchair Ramps

by Road Ready



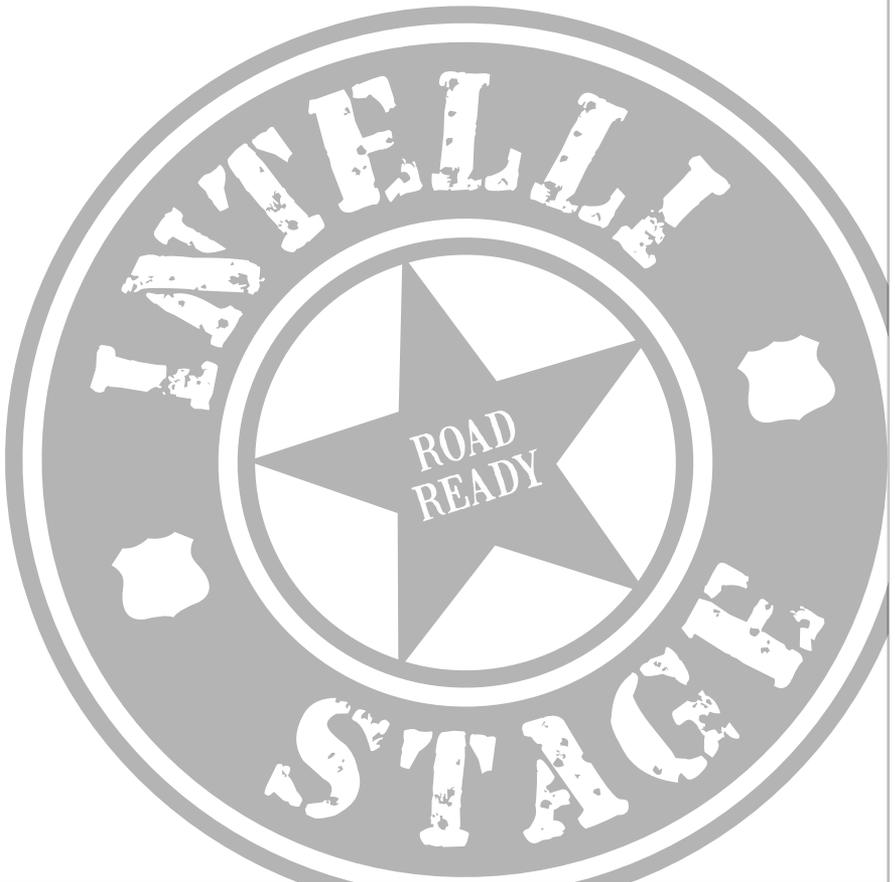

IntelliStage™

Equipment and Wheelchair Ramp

by Road Ready

Contents

Introduction / About Your Ramp	1
Meet the Components	2
Important Safety Instructions	2
Stage Preparation	3
Leg Preparation	3
Ramp Assembly	4
Adding Platofms	5
Adding GuardRails	6
Ramp Configurations	7-28
Individual Ramp Components	29
Ramp Transportation Systems	30
Limited 2 Year Warranty	30

Introduction

Thank you for being a Road Ready Customer and welcome to the family.

We do one thing and do it well – build products that make your life easier. Crafting innovative, quality products is our calling and we take it seriously. Strong, lightweight and versatile, **IntelliStage™** products are crafted out of the finest materials available and put through our grueling quality check before they are ships out the door.

We thank you for your purchase and know that your **IntelliStage™** system will definitely steal the show! However, if you should require any assistance or service, you'll find that we take as much pride in supporting our products as we do in designing and building them.

About Your Ramp

Flexible, Adaptive and Modular, **IntelliStage™** ramps offer endless possibilities and configurations.

Adjustable and Adaptive

Designed to fit your needs, ramps can be adjusted from either a steep slope suited for equipment loading or a shallow slope for wheelchair access. All ramps are based around our modular metal platform frames and can accept matching sized Carpet, Tuffcoat or Industrial finish platforms. Ramp legs are height adjustable to ensure your ramp slope is always uniform and perfectly aligned. Ramps sections can be added, reconfigured and adjusted as your needs change - landings allow for the creation of turns, and switch back configurations to minimize the overall ramp footprint.

Safe and Secure

Guardrails can be added to any ramp and come standard on all wheelchair packages. Ramp legs and side mounting hardware secure all ramp frames together to create a rock solid and secure ramp.

Hassle Free Transportation


Our optional transportation solutions take the hard work out of transporting your ramp system. We offer trolley solutions for small packages and caster board/guardrail trolley solutions for larger packages. Consult your local **IntelliStage™** dealer to find out which transportation system will work best for your needs, or visit www.IntelliStage.com for more details.

Meet the Components:


Putting together your **IntelliStage™ Ramp** system was designed to be simple enough for anyone to do. Consequently, the number of components you will encounter in the assembly process is limited. Nonetheless, let's take a moment for a little meet and greet...




A.) Platform

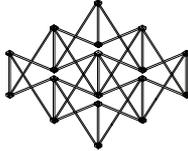


B.) Riser

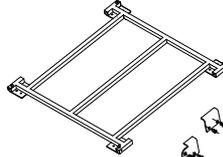


C.) Ramp Platform Frame & Hardware

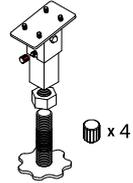

D.) Ramp Legs & Hardware

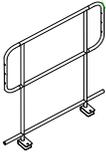

E.) Ramp & Adjustable Guardrail Panels

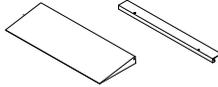

F.) Ramp Base Plate & Transition Plate



G.) Leg Cross Bars & Hardware



H.) Platform Guide Posts

A.) Platform

Durable, modular stage surface - supports up to 185 lbs./sq. ft. (900kg/sq. meter).

B.) Riser

Supports platform surface - available in 8", 16", 24" and 32" (20, 40, 60 & 80 cm.) heights.

C.) Ramp Platform Frame & Hardware

The ramp frame is the base component for building a ramp. **IntelliStage™** platforms and Ramp legs all attach to the ramp frames.

D.) Ramp Legs & Hardware

Ramp legs are height adjustable and can pivot to change the ramp slope from a steep angle suited for equipment to a shallow slope suitable for wheelchair access.

E.) Ramp & Adjustable Guardrail Panels

Ramp guardrails can be added to any ramp and come standard on wheelchair ramps. Adjustable guardrails are required for all transitions between sloped and level ramp surfaces (and vice versa).

F.) Ramp Base Plate & Transition Plate

These plates are used to smoothly transition from either sloping or level surfaces.

G.) Leg Cross Bars & Hardware

Leg cross bars helps support and are required for leg sets #8 and #9.

H.) Platform Guide Posts

Guide posts align platforms on the ramp frames. Platform guide posts are included with the ramp frame hardware.



Important Safety Instructions:

- 1.) Read and follow all instructions
- 2.) Do not exceed the maximum weight capacity
- 3.) Do not vertically couple more than 2 risers
- 4.) Completely secure all fasteners, platforms, legs and frames
- 5.) Assemble and use only on a flat and level surface

STAGE PREPARATION:





Identify the ramp configuration you wish to build from pages 7-28 and verify that you have all required hardware and adequate space for assembly of your ramp.

1.) Set up your stage. If your stage or ramp will have guardrails, drill the guardrail holes at this time. For more information consult the **IntelliStage™ Portable Stage System user manual**.

If you do not have a copy of the portable stage manual it can be downloaded at IntelliStage.com

2.) If your ramp configuration has a top landing assemble and attach it to the stage at this time. Landing assembly is identical to platform and riser assembly.

3.) Attach one ramp connecting plate onto either your stage or top landing where the ramp will attach. You may need to remove the platform-to-platform locking mechanisms on the specific platform where you will attach the ramp connecting plate. Platform locking mechanisms simply unscrew using a hex key and slide out of the platform.

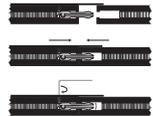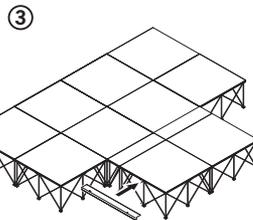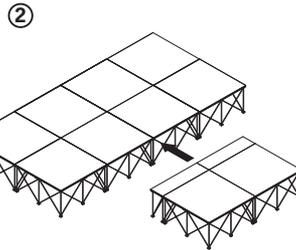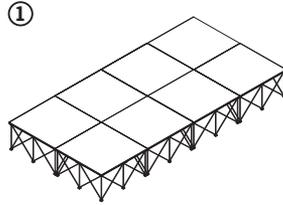








LEG PREPARATION:

4.) Adjust all ramp leg slopes to either the wheelchair or equipment angle depending on your configuration. The slope can be changed by securing the nut onto the side marked as either E (Equipment) or W (Wheelchair), see Fig 4.

5.) Measure and adjust each numbered leg to its specified height (leg numbers are marked on the top of each leg). All leg numbers required for your configuration and their respective heights can be found on pages 7-28.

Note: Leg heights are measured as shown in Fig 5. Leg heights are adjusted by turning the leg base while keeping the top stationary as shown.

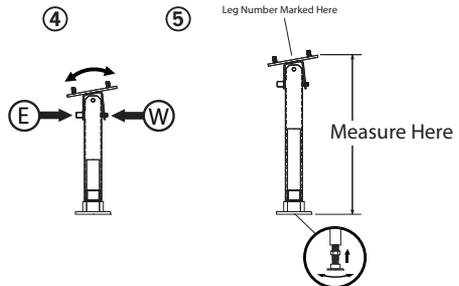

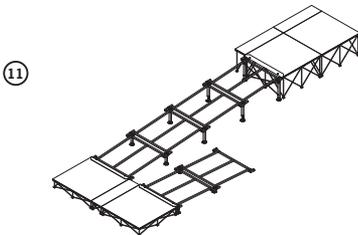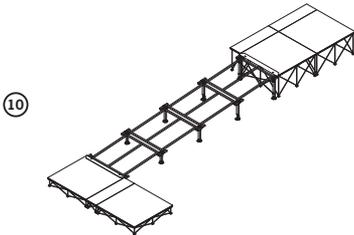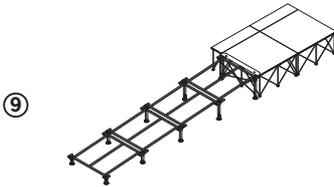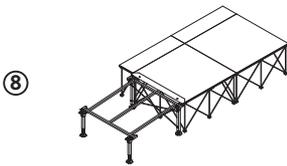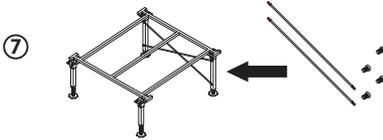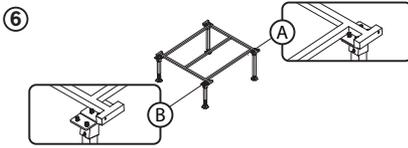

RAMP ASSEMBLY:

6.) We recommend to begin assembling your ramp starting from the top. *Starting from the top ensures that you have enough space and that the ramp is properly aligned when finished.*

Note: Initially leave all hardware nuts and bolts fairly loose to allow for later ramp adjustments.

A.) According to your ramp configuration take the tallest legs and attach them to the first frame. The top legs should be attached as shown in Fig A with all 4 screw posts on a single frame.

B.) Attach the next set of legs (where applicable) to the first frame as shown in Fig B. Only attach 2 screw posts to the first frame. The remaining 2 screw posts will attach to the next frame.

7.) Where leg sets #8 or #9 are used secure them with ramp leg crossbars and hardware as shown in Fig 7.

8.) Move your completed tallest frame next to your stage where you installed your ramp connecting plate. *Do not yet secure the ramp to the finished stage. Make any height adjustments necessary.*

Note: The ramps will be approximately 1" lower than your landings or stage at this point because the platforms have not been added.

9.) Continue to attach all legs and frames together as previously shown in Fig 6A for legs next to landings/stages or as shown in Fig 6B where frame-to-frame connections are made.

10.) Should your ramp design have a middle landing for either a switchback or turn, assemble the landing and attach ramp connecting plates at all points ramps will attach. See Fig 3 and 10.

11.) Continue ramp assembly as necessary.

A.) After ramp frame assembly is completed make any height adjustments required.

Securely tighten all hardware that was previously left loose before proceeding.

ADDING PLATFORMS:

If your ramp configuration will have guardrails and you have not yet drilled the guard rail platform holes do so at this point before proceeding. For more detailed instructions consult the **IntelliStage™ Portable Stage System user manual**.

If you do not have a copy of the portable stage manual it can be downloaded at IntelliStage.com

12.) Secure the 4 platform connection posts to all frames as shown in Fig 12. *Connection posts are supplied as part of the frame hardware.*

Note: You may need to make leg height adjustments during the following steps. See Step 17.

13.) Place the first platform onto the top ramp frame as shown. Move ramp next to the top landing or stage. Secure ramp to stage with the provided side mounting bracket hardware. Repeat this step at all remaining ramp and landing connections. *You may need to remove the platform-to-platform locking mechanisms. Locking mechanisms simply unscrew using a hex key and slide out of the platform.*







14.) Place platforms on all remaining frames. *You may need to remove the platform-to-platform locking mechanisms. Locking mechanisms simply unscrew using a hex key and slide out of the platform.*





15.) Secure all platforms to their frames with the frame side mounting brackets as shown. The side mounting brackets hold the platforms in place and also lock the frames together.

16.) Install and attach the ramp base plate to the ramp with the supplied side mounting hardware.

17.) Make height adjustments as required to keep the ramp slope uniform and inline then secure all legs with their integrated locking nuts. *leg set #1 does not have integrated locking nuts.*

Your basic ramp assembly is now complete.

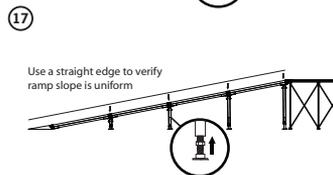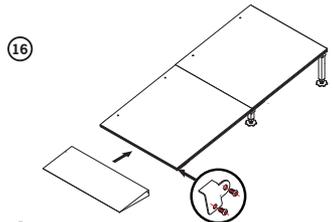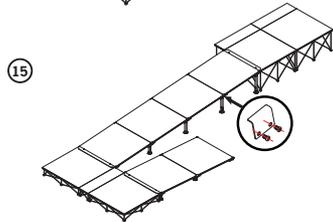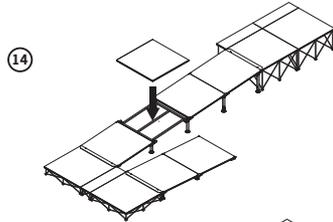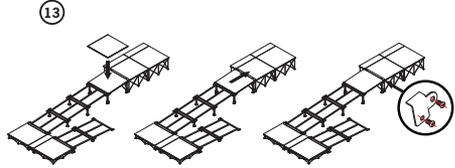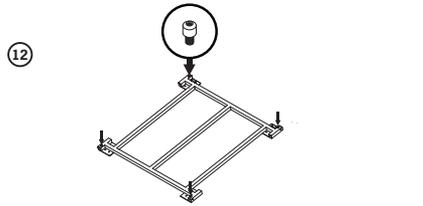

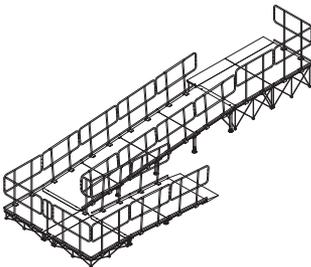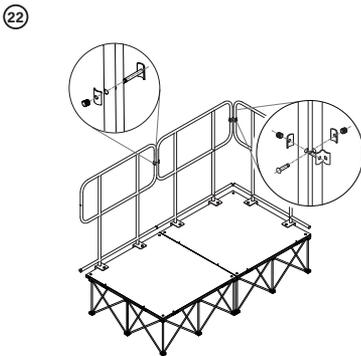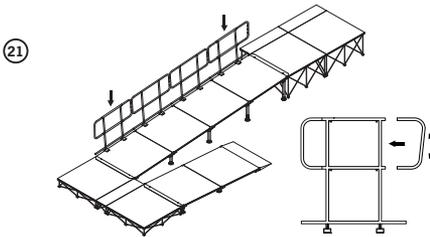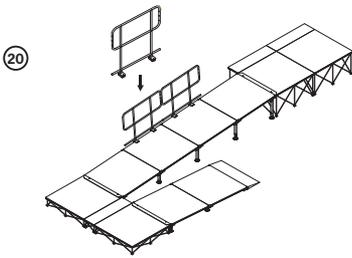

ADDING GUARDRAILS: (optional)

For more detailed instructions on guardrail installation please consult the **IntelliStage™ Portable Stage System user manual**.

If you do not have a copy of the portable stage manual it can be downloaded at IntelliStage.com

18.) If your ramp configuration requires guardrails install and secure them on the platforms with the supplied hardware - see step 19 before proceeding.

19.) At all transitions from a slope to a flat landing or stage (or vice versa) you will need adjustable ramp guardrails. Adjust the guardrails for the proper slope and install them onto the platforms as needed. Adjustable guardrails sections are interchangeable and reversible.

20.) Connect guardrails together using guardrail side mounting bracket hardware for rails in a straight line and corner mounting bracket hardware for rails forming a corner.



Your guardrail ramp is now complete.

IS20RC, IS20RT, IS20RI



Equipment Ramp for 20cm High Stages


Top View:

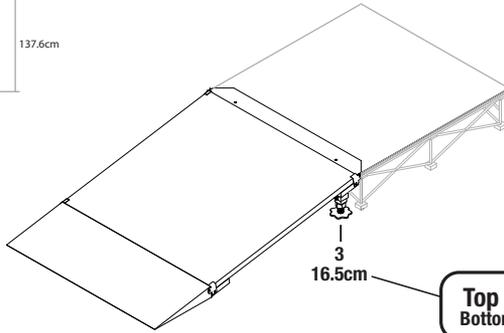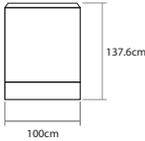

Top # — RAMP LEG NUMBER
Bottom # — LEG HEIGHT ADJUSTMENT

* Stage not included with ramp

Side View:

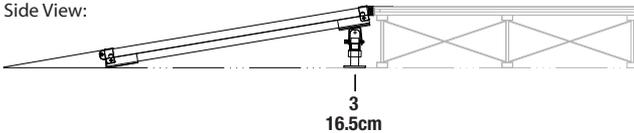


SKU	DESCRIPTION	PCS PER MASTER PACK	QTY IN SET
ISPE1X1CS or ISPE1X1TS or ISPE1X1IS	1mtr x 1mtr Carpet Finish Platform 1mtr x 1mtr TuffCoat Finish Platform 1mtr x 1mtr Industrial Finish Platform	1	1
ISERBP	Bottom ramp plate with mounting hardware	1	1
ISERCP	Platform connecting plate	1	1
ISERPF	Metal platform assembly plate	1	1
IS2AL3	Two pack of equipment ramp adjustable leg # 3 with hardware	2	1

IS20RWC, IS20RWT, IS20RWI



Wheelchair Ramp with Guard Rails for 20cm High Stages


guardrails not shown

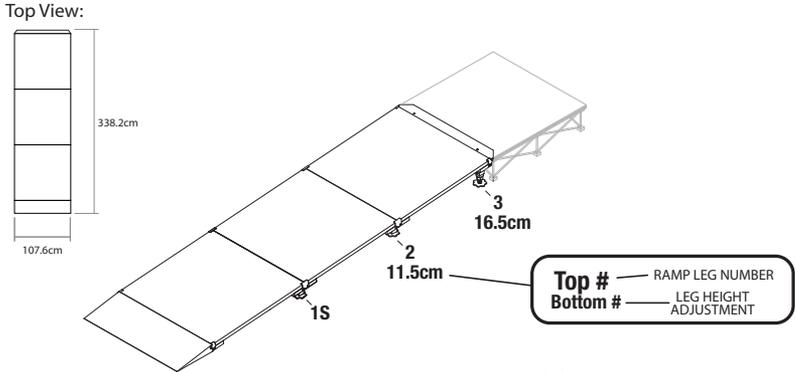

* Stage not included with ramp

*Guard Rails Not Shown in diagram

Side View:




SKU	DESCRIPTION	PCS PER MASTER PACK	QTY IN SET
ISPE1X1CD or ISPE1X1TD or ISPE1X1ID	1 x 1mtr Carpet Finish Platforms 1 x 1mtr TuffCoat Finish Platforms 1 x 1mtr Industrial Finish Platforms	2	1
ISPE1X1CS or ISPE1X1TS or ISPE1X1IS	1 x 1mtr Carpet Finish Step Platform 1 x 1mtr TuffCoat Finish Step Platform 1 x 1mtr Industrial Finish Step Platform	1	1
ISERBP	Bottom ramp plate with mounting hardware	1	1
ISERCP	Platform connecting plate	1	1
ISERPF	Metal platform assembly plate	1	3
IS2AL1S	Two pack of equipment ramp leg # 1S with hardware	2	1
IS2AL2	Two pack of equipment ramp adjustable leg # 2 with hardware	2	1
IS2AL3	Two pack of equipment ramp adjustable leg # 3 with hardware	2	1
ISERGRPD	Two pack guard rail panels for ramps w/ mounting hardware	2	2
ISEARGRPD	Two pack adjustable ramp guard rail panels w/ mounting hardware	2	1


IS40RC, IS40RT, IS40RI



Equipment Ramp for 40cm High Stages

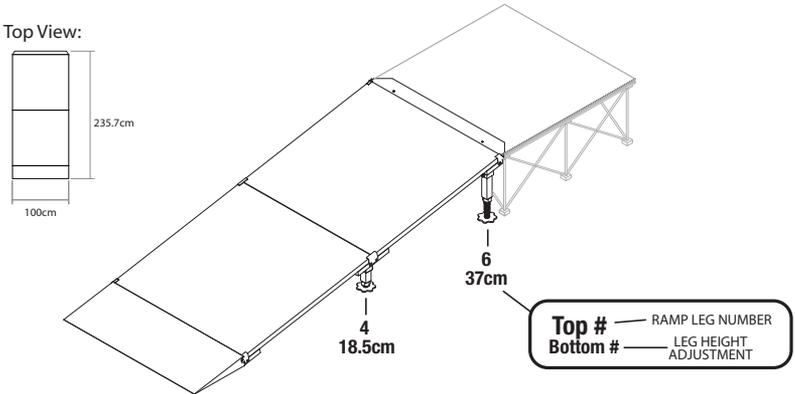

* Stage not included with ramp

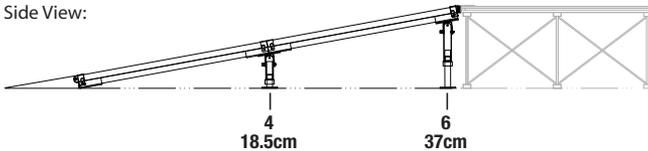


SKU	DESCRIPTION	PCS PER MASTER PACK	QTY IN SET
ISP4X4CD or ISP4X4TD or ISP4X4ID	1mtr x 1mtr Carpet Finish Platforms 1mtr x 1mtr TuffCoat Finish Platforms 1mtr x 1mtr Industrial Finish Platforms	2	1
ISERBP	Bottom ramp plate with mounting hardware	1	1
ISERCP	Platform connecting plate	1	1
ISERPF	Metal platform assembly plate	1	2
IS2AL4	Two pack of equipment ramp adjustable leg # 4 with hardware	2	1
IS2AL6	Two pack of equipment ramp adjustable leg # 6 with hardware	2	1

IS40RLC, IS40RLT, IS40RLI



Equipment Ramp with Landing for 40cm High Stages

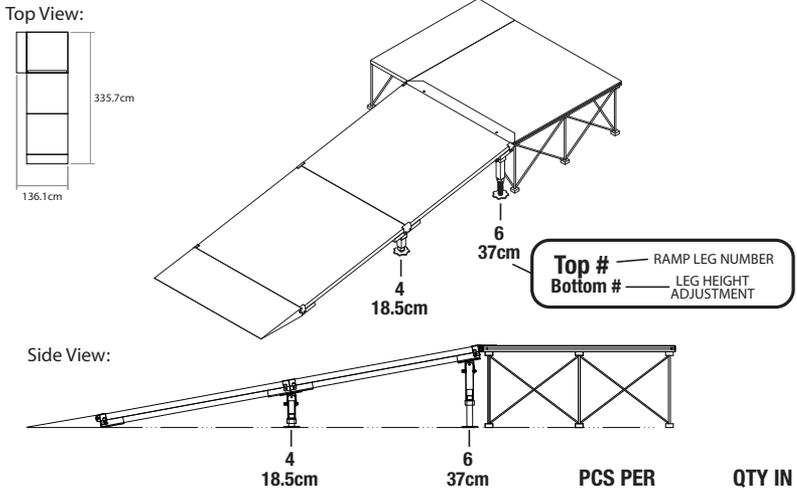


SKU	DESCRIPTION	PCS PER MASTER PACK	QTY IN SET
ISPE1X1CD or ISPE1X1TD or ISPE1X1ID	1 x 1mtr Carpet Finish Platforms 1 x 1mtr TuffCoat Finish Platforms 1 x 1mtr Industrial Finish Platforms	2	1
ISPE1X1CD or ISPE1X1TD or ISPE1X1ID	1 x 1mtr Carpet Finish Platforms 1 x 1mtr TuffCoat Finish Platforms 1 x 1mtr Industrial Finish Platforms	1	1
ISSTEPEC or ISSTEPET or ISSTEPEI	1mtr Carpet Finish Step Platform 1mtr TuffCoat Finish Step Platform 1mtr Industrial Finish Step Platform	1	1
ISE1X1X40	40cm High Riser for 1mtr x 1mtr Platform	1	1
ISESTEP40	40cm High Riser for 1mtr Step Platform	1	1
ISERBP	Bottom ramp plate with mounting hardware	1	1
ISERCP	Platform connecting plate	1	1
ISERPF	Metal platform assembly plate	1	2
IS2AL4	Two pack of equipment ramp adjustable leg # 4 with hardware	2	1
IS2AL6	Two pack of equipment ramp adjustable leg # 6 with hardware	2	1

IS40RWC, IS40RWT, IS40RWI




Straight Wheelchair Ramp for 40cm High Stages

Wheelchair ramps include guardrails (not shown)

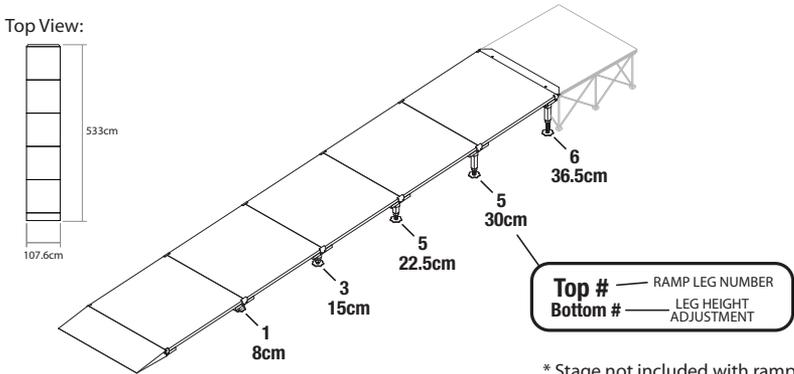

Side View:



SKU	DESCRIPTION	PCS PER MASTER PACK	QTY IN SET
ISPE1X1CD or ISPE1X1TD or ISPE1X1ID	1 x 1mtr Carpet Finish Platforms 1 x 1mtr TuffCoat Finish Platforms 1 x 1mtr Industrial Finish Platforms	2	2
ISPE1X1CS or ISPE1X1TS or ISPE1X1IS	1 x 1mtr Carpet Finish Platform 1 x 1mtr TuffCoat Finish Platform 1 x 1mtr Industrial Finish Platform	1	1
ISERBP	Bottom ramp plate with mounting hardware	1	1
ISERCP	Platform connecting plate	1	1
ISERPF	Metal platform assembly plate	1	5
IS2AL1	Two pack of equipment ramp adjustable leg # 1 with hardware	2	1
IS2AL3	Two pack of equipment ramp adjustable leg # 3 with hardware	2	1
IS2AL5	Two pack of equipment ramp adjustable leg # 5 with hardware	2	2
IS2AL6	Two pack of equipment ramp adjustable leg # 6 with hardware	2	1
ISERGRPD	Two pack guard rail panels for ramps w/ mounting hardware	2	4
ISEARGRPD	Two pack adjustable ramp guard rail panels w/ mounting hardware	2	1


IS40RLWC, IS40RLWT, IS40RLWI



Straight Wheelchair Ramp with Landing for 40cm High Stages

Wheelchair ramps include guardrails (not shown)

Top View:

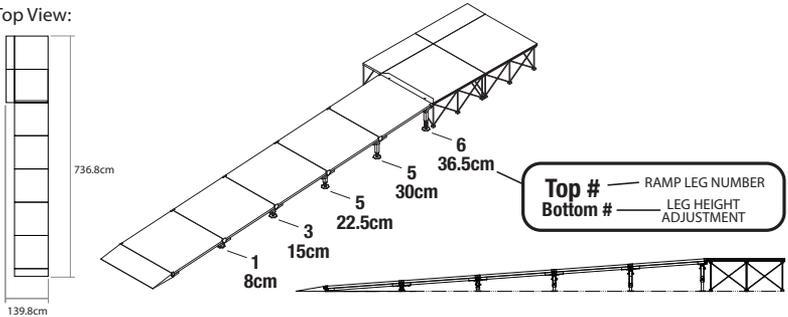



SKU	DESCRIPTION	PCS PER MASTER PACK	QTY IN SET
ISPE1X1CD or ISPE1X1TD or ISPE1X1ID	1 x 1mtr Carpet Finish Platforms 1 x 1mtr TuffCoat Finish Platforms 1 x 1mtr Industrial Finish Platforms	2	3
ISPE1X1CS or ISPE1X1TS or ISPE1X1IS	1 x 1mtr Carpet Finish Platform 1 x 1mtr TuffCoat Finish Platform 1 x 1mtr Industrial Finish Platform	1	1
ISSTEPEC or ISSTEPET or ISSTEPEID	Carpet Finish Step Platform TuffCoat Finish Step Platform Industrial Finish Step Platform	1	2
ISE1X1X40	40ccm High Riser for 1 x 1 mtr Platform	1	2
ISESTEP40	40cm High Riser for 1mtr Step Platform	1	2
ISERBP	Bottom ramp plate with mounting hardware	1	1
ISERCP	Platform connecting plate	1	1
ISERPF	Metal platform assembly plate	1	5
IS2AL1	Two pack of equipment ramp adjustable leg # 1 with hardware	2	1
IS2AL3	Two pack of equipment ramp adjustable leg # 3 with hardware	2	1
IS2AL5	Two pack of equipment ramp adjustable leg # 5 with hardware	2	2
IS2AL6	Two pack of equipment ramp adjustable leg # 6 with hardware	2	1
ISERSTEPGRPD	Two pack of step guard rail panels w/ mounting hardware	2	1
ISERGRPD	Two pack guard rail panels for ramps w/ mounting hardware	2	6
ISEARGRPD	Two pack adjustable ramp guard rail panels w/ mounting hardware	2	1
IS2CMB	Two pack of guard rail panel corner mounting bracket	2	1

IS60RC, IS60RT, IS60RI




Equipment Ramp for 60cm High Stages

Top View:

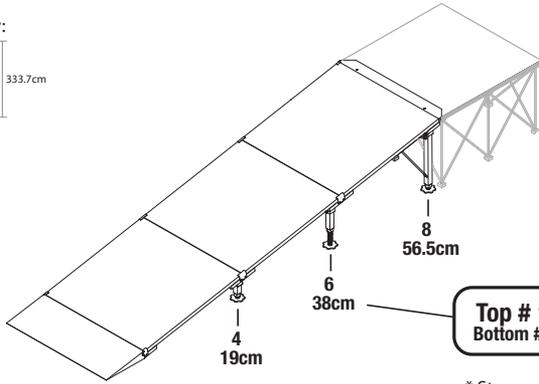

* Stage not included with ramp

Side View:

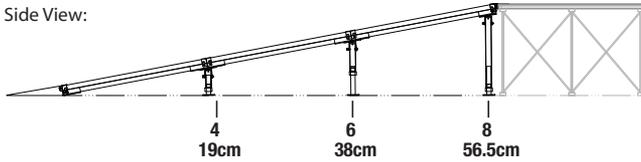


SKU	DESCRIPTION	PCS PER MASTER PACK	QTY IN SET
ISPE1X1CD or ISPE1X1TD or ISPE1X1ID	1 x 1mtr Carpet Finish Platforms 1 x 1mtr TuffCoat Finish Platforms 1 x 1mtr Industrial Finish Platforms	2	1
ISPE1X1CS or ISPE1X1TS or ISPE1X1IS	1 x 1mtr Carpet Finish Platform 1 x 1mtr TuffCoat Finish Platform 1 x 1mtr Industrial Finish Platform	1	1
ISERBP	Bottom ramp plate with mounting hardware	1	1
ISERCP	Platform connecting plate	1	1
ISERPF	Metal platform assembly plate	1	3
IS2AL4	Two pack of equipment ramp adjustable leg # 4 with hardware	2	1
IS2AL6	Two pack of equipment ramp adjustable leg # 6 with hardware	2	1
IS2AL8	Two pack of equipment ramp adjustable leg # 8 with hardware	2	1
ISELCB	Pack of cross bars for leg sets # 8 or 9	2	1

IS60RLC, IS60RLT, IS60RLI



Equipment Ramp with Landing for 60cm High Stages

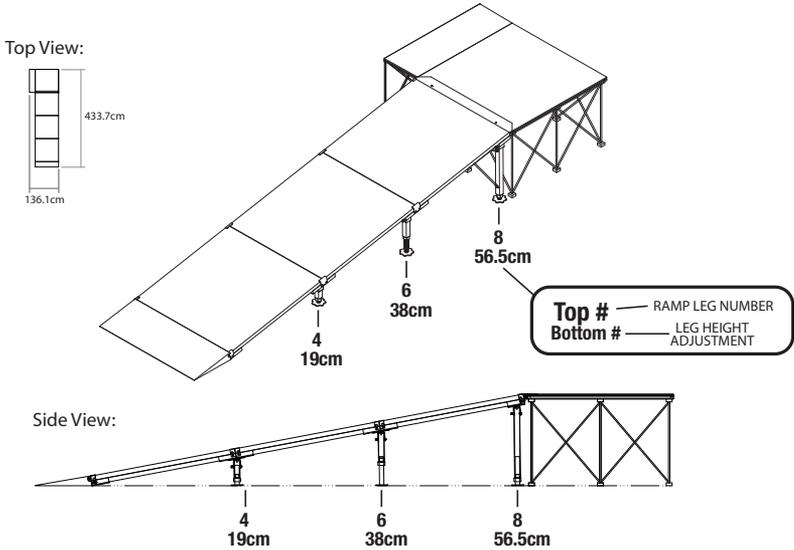


SKU	DESCRIPTION	PCS PER MASTER PACK	QTY IN SET
ISPE1X1CD or ISPE1X1TD or ISPE1X1ID	1 x 1mtr Carpet Finish Platforms 1 x 1mtr TuffCoat Finish Platforms 1 x 1mtr Industrial Finish Platforms	2	2
ISSTEPEC or ISSTEPET or ISSTEPEI	Carpet Finish Step Platform TuffCoat Finish Step Platform Industrial Finish Step Platform	1	1
ISE1X1X60	60cm High Riser for 1 x 1mtr Platform	1	1
ISESTEP60	60cm High Riser for 1mtr Step Platform	1	1
ISERBP	Bottom ramp plate with mounting hardware	1	1
ISERCP	Platform connecting plate	1	1
ISERPF	Metal platform assembly plate	1	3
IS2AL4	Two pack of equipment ramp adjustable leg # 4 with hardware	2	1
IS2AL6	Two pack of equipment ramp adjustable leg # 6 with hardware	2	1
IS2AL8	Two pack of equipment ramp adjustable leg # 8 with hardware	2	1
ISLCB	Pack of cross bars for leg sets # 8 or 9	2	1

IS60RCGR, IS60RTGR, IS60RIGR



Equipment Ramp with Guard Rails for 60cm High Stages

guardrails not shown

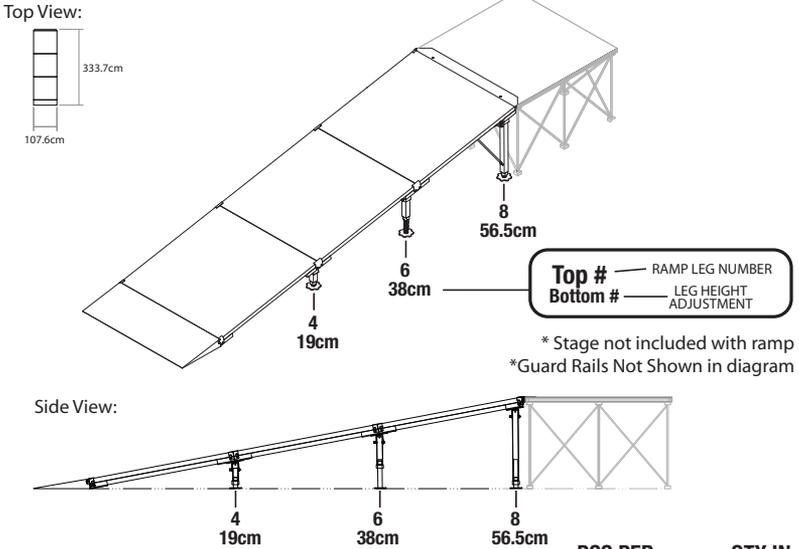


SKU	DESCRIPTION	PCS PER MASTER PACK	QTY IN SET
ISPE1X1CD or ISPE1X1TD or ISPE1X1ID	4' x 4' Carpet Finish Platforms 4' x 4' TuffCoat Finish Platforms 4' x 4' Industrial Finish Platforms	2	1
ISPE1X1CS or ISPE1X1TS or ISPE1X1IS	4' x 4' Carpet Finish Platforms 4' x 4' TuffCoat Finish Platforms 4' x 4' Industrial Finish Platforms	1	1
ISERBP	Bottom ramp plate with mounting hardware	1	1
ISERCP	Platform connecting plate	1	1
ISERPF	Metal platform assembly plate	1	3
IS2AL4	Two pack of equipment ramp adjustable leg # 4 with hardware	2	1
IS2AL6	Two pack of equipment ramp adjustable leg # 6 with hardware	2	1
IS2AL8	Two pack of equipment ramp adjustable leg # 8 with hardware	2	1
ISELCB	Pack of cross bars for leg sets # 8 or 9	2	1
ISERGRPD	Two pack guard rail panels for ramps w/ mounting hardware	2	2
ISEARGRPD	Two pack adjustable ramp guard rail panels w/ mounting hardware	2	1

IS60RLCGR, IS60RLTGR, IS60RLIGR



Equipment Ramp with Guard Rails and Landing for 60cm High Stages

guardrails not shown

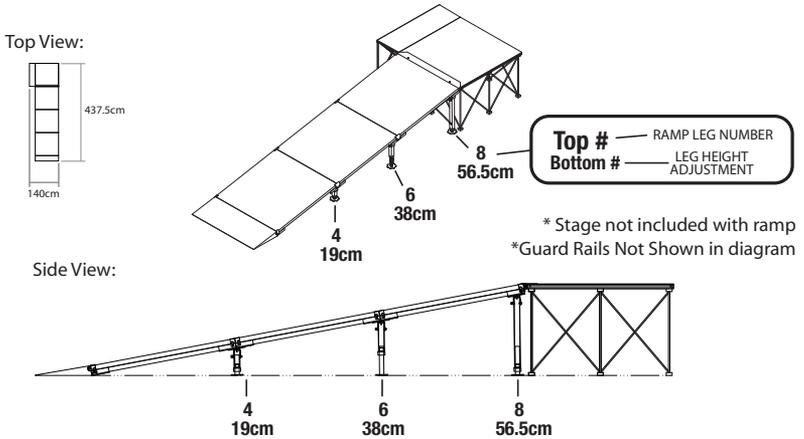


SKU	DESCRIPTION	PCS PER MASTER PACK	QTY IN SET
ISPE1X1CD or ISPE1X1TD or ISPE1X1ID	1 x 1mtr Carpet Finish Platforms 1 x 1mtr TuffCoat Finish Platforms 1 x 1mtr Industrial Finish Platforms	2	2
ISSTEPEC or ISSTEPET or ISSTEPEI	Carpet Finish Step Platform TuffCoat Finish Step Platform Industrial Finish Step Platform	1	1
ISE1X1X60	60cm High Riser for 1 x 1mtr Platform	1	1
ISESTEP60	60cm High Riser for 1mtr Step Platform	1	1
ISERBP	Bottom ramp plate with mounting hardware	1	1
ISERCP	Platform connecting plate	1	1
ISERPF	Metal platform assembly plate	1	3
IS2AL4	Two pack of equipment ramp adjustable leg # 4 with hardware	2	1
IS2AL6	Two pack of equipment ramp adjustable leg # 6 with hardware	2	1
IS2AL8	Two pack of equipment ramp adjustable leg # 8 with hardware	2	1
ISELCB	Pack of cross bars for leg sets # 8 or 9	2	1
ISERSTEPGRPD	Two pack of step guard rail ramp panels w/ mounting hardware	2	1
ISERGRPD	Two pack guard rail panels for ramps w/ mounting hardware	2	3
ISEARGRPD	Two pack adjustable ramp guard rail panels w/ mounting hardware	2	1
IS2CMB	Two pack of guard rail panel corner mounting bracket	2	1

IS60RWC, IS60RWT, IS60RWI



Straight Wheelchair Ramp for 60cm High Stages

Wheelchair ramps include guardrails (not shown)

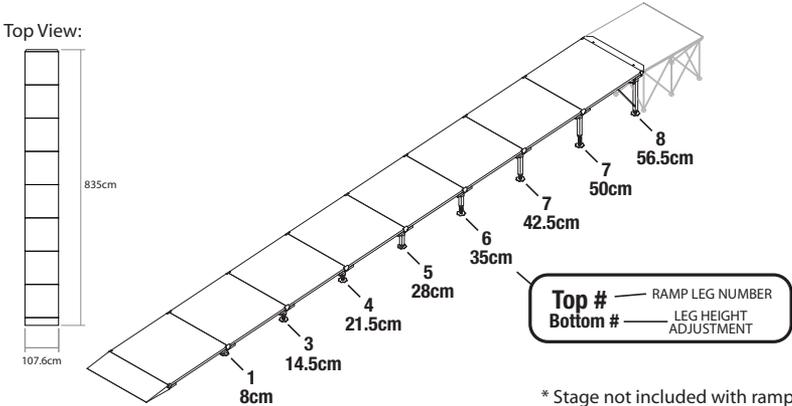

Side View:



SKU	DESCRIPTION	PCS PER MASTER PACK	QTY IN SET
ISPE1X1CD or ISPE1X1TD or ISPE1X1ID	1 x 1mtr Carpet Finish Platforms 1 x 1mtr TuffCoat Finish Platforms 1 x 1mtr Industrial Finish Platforms	2	4
ISERBP	Bottom ramp plate with mounting hardware	1	1
ISERCP	Platform connecting plate	1	1
ISERPF	Metal platform assembly plate	1	8
IS2AL1	Two pack of equipment ramp adjustable leg # 1 with hardware	2	1
IS2AL3	Two pack of equipment ramp adjustable leg # 3 with hardware	2	1
IS2AL4	Two pack of equipment ramp adjustable leg # 4 with hardware	2	1
IS2AL5	Two pack of equipment ramp adjustable leg # 5 with hardware	2	1
IS2AL6	Two pack of equipment ramp adjustable leg # 6 with hardware	2	1
IS2AL7	Two pack of equipment ramp adjustable leg # 7 with hardware	2	2
IS2AL8	Two pack of equipment ramp adjustable leg # 8 with hardware	2	1
ISERGRPD	Two pack guard rail panels for ramps w/ mounting hardware	2	7
ISEARGRPD	Two pack adjustable ramp guard rail panels w/ mounting hardware	2	1



IS60RLWC, IS60RLWT, IS60RLWI



Wheelchair Ramp with Landing for 60cm High Stages

Wheelchair ramps include guardrails (not shown)

Top View:

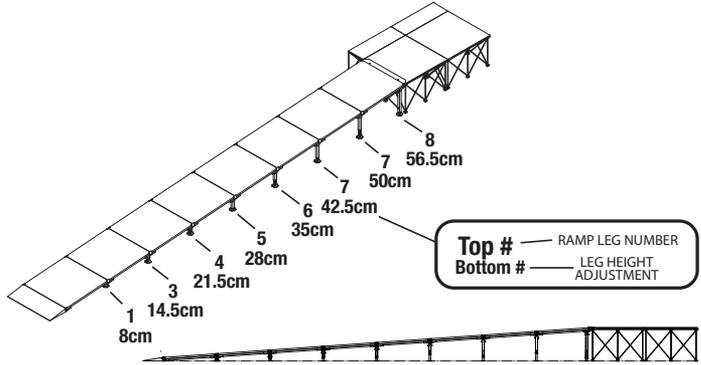


SKU	DESCRIPTION	PCS PER MASTER PACK	QTY IN SET
ISPE1X1CD or ISPE1X1TD or ISPE1X1ID	1 x 1mtr Carpet Finish Platforms 1 x 1mtr TuffCoat Finish Platforms 1 x 1mtr Industrial Finish Platforms	2	5
ISSTEPEC or ISSTEPET or ISSTEPEI	1 x 1mtr Carpet Finish Platform 1 x 1mtr TuffCoat Finish Platform 1 x 1mtr Industrial Finish Platform	1	2
ISE1X1X60	60cm High Riser for 1 m x 1 m Platform	1	2
ISESTEP60	60cm High Riser for 1mtr Step Platform	1	2
ISERBP	Bottom ramp plate with mounting hardware	1	1
ISERCP	Platform connecting plate	1	1
ISERPF	Metal platform assembly plate	1	8
IS2AL1	Two pack of equipment ramp adjustable leg # 1 with hardware	2	1
IS2AL3	Two pack of equipment ramp adjustable leg # 3 with hardware	2	1
IS2AL4	Two pack of equipment ramp adjustable leg # 4 with hardware	2	1
IS2AL5	Two pack of equipment ramp adjustable leg # 5 with hardware	2	1
IS2AL6	Two pack of equipment ramp adjustable leg # 6 with hardware	2	1
IS2AL7	Two pack of equipment ramp adjustable leg # 7 with hardware	2	2
IS2AL8	Two pack of equipment ramp adjustable leg # 8 with hardware	2	1
ISERGRPD	Two pack guard rail panels for ramps w/ mounting hardware	2	9
ISEARGRPD	Two pack adjustable ramp guard rail panels w/ mounting hardware	2	1
ISELCB	Pack of cross bars for leg sets # 8 or 9	2	1
IS2CMB	Two pack of guard rail panel corner mounting bracket	2	1

IS60RSBWC, IS60RSBWT, IS60RSBW1



Switch Back Wheelchair Ramp for 60cm High Stages

Wheelchair ramps include guardrails (not shown)

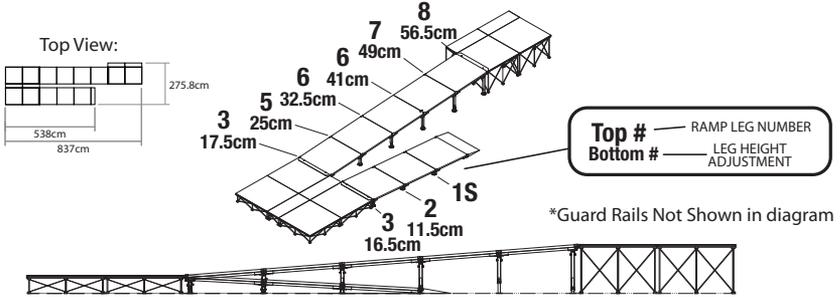


SKU	DESCRIPTION	PCS PER MASTER PACK	QTY IN SET
ISPE1X1CD or ISPE1X1TD or ISPE1X1ID	1 x 1mtr Carpet Finish Platforms 1 x 1mtr TuffCoat Finish Platforms 1 x 1mtr Industrial Finish Platforms	2	7
ISSTEPEC or ISSTEPET or ISSTEPEI	1 x 1mtr Carpet Finish Platform 1 x 1mtr TuffCoat Finish Platform 1 x 1mtr Industrial Finish Platform	1	4
ISE1X1X20	20cm High Riser for 1 m x 1m Platform	1	4
ISESTEP20	20cm High Riser for 1mtr Step Platform	1	2
ISE1X1X60	60cm High Riser for 1 m x 1m Platform	1	2
ISESTEP60	60cm High Riser for 1mtr Step Platform	1	2
ISERBP	Bottom ramp plate with mounting hardware	1	1
ISERCP	Platform connecting plate	1	3
ISERPF	Metal platform assembly plate	1	8
IS2AL1S	Two pack of fixed equipment ramp leg # 1S with hardware	2	1
IS2AL2	Two pack of equipment ramp adjustable leg # 2 with hardware	2	1
IS2AL3	Two pack of equipment ramp adjustable leg # 3 with hardware	2	2
IS2AL5	Two pack of equipment ramp adjustable leg # 5 with hardware	2	1
IS2AL6	Two pack of equipment ramp adjustable leg # 6 with hardware	2	2
IS2AL7	Two pack of equipment ramp adjustable leg # 7 with hardware	2	1
IS2AL8	Two pack of equipment ramp adjustable leg # 8 with hardware	2	1
ISERGRPD	Two pack guard rail panels for ramps w/ mounting hardware	2	9
ISEARGRPD	Two pack adjustable ramp guard rail panels w/ mounting hardware	2	3
IS2ESTEPGRP	Two pack of step guard rail panels w/ mounting hardware	2	2
ISELCB	Pack of cross bars for leg sets # 8 or 9	2	1
IS2CMB	Two pack of guard rail panel corner mounting bracket	2	3

IS60R90WC, IS60R90WT, IS60R90WI



90 Degree Turn Wheelchair Ramp for 60cm High Stages

Wheelchair ramps include guardrails (not shown)

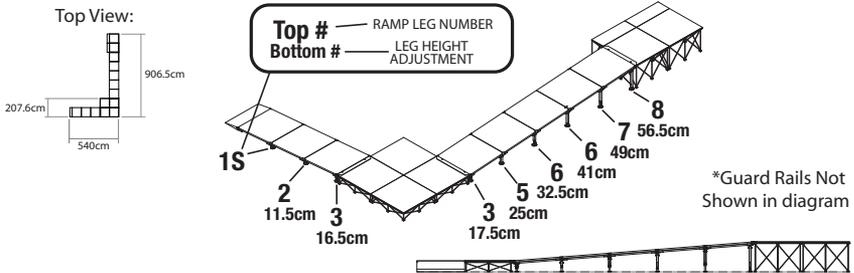


SKU	DESCRIPTION	PCS PER MASTER PACK	QTY IN SET
ISPE1X1CD or ISPE1X1TD or ISPE1X1ID	1 x 1mtr Carpet Finish Platforms 1 x 1mtr TuffCoat Finish Platforms 1 x 1mtr Industrial Finish Platforms	2	7
ISSTEPEC or ISSTEPET or ISSTEPEI	1 x 1mtr Carpet Finish Platform 1 x 1mtr TuffCoat Finish Platform 1 x 1mtr Industrial Finish Platform	1	2
ISE1X1X20	20cm High Riser for 1 m x 1m Platform	1	4
ISE1X1X60	60cm High Riser for 1 m x 1m Platform	1	2
ISESTEP60	60cm High Riser for 1mtr Step Platform	1	2
ISERBP	Bottom ramp plate with mounting hardware	1	1
ISERCP	Platform connecting plate	1	3
ISERPF	Metal platform assembly plate	1	8
IS2AL1S	Two pack of fixed equipment ramp leg # 1S with hardware	2	1
IS2AL2	Two pack of equipment ramp adjustable leg # 2 with hardware	2	1
IS2AL3	Two pack of equipment ramp adjustable leg # 3 with hardware	2	2
IS2AL5	Two pack of equipment ramp adjustable leg # 5 with hardware	2	1
IS2AL6	Two pack of equipment ramp adjustable leg # 6 with hardware	2	2
IS2AL7	Two pack of equipment ramp adjustable leg # 7 with hardware	2	1
IS2AL8	Two pack of equipment ramp adjustable leg # 8 with hardware	2	1
ISERGRPD	Two pack guard rail panels for ramps w/ mounting hardware	2	9
ISEARGRPD	Two pack adjustable ramp guard rail panels w/ mounting hardware	2	3
IS2ESTEPGRP	Two pack of step guard rail panels w/ mounting hardware	2	1
ISELCB	Pack of cross bars for leg sets # 8 or 9	2	1
IS2AMP	Two pack of ramp assembly plates	2	2

IS80RC, IS80RT, IS80RI



Equipment Ramp for 80cm High Stages

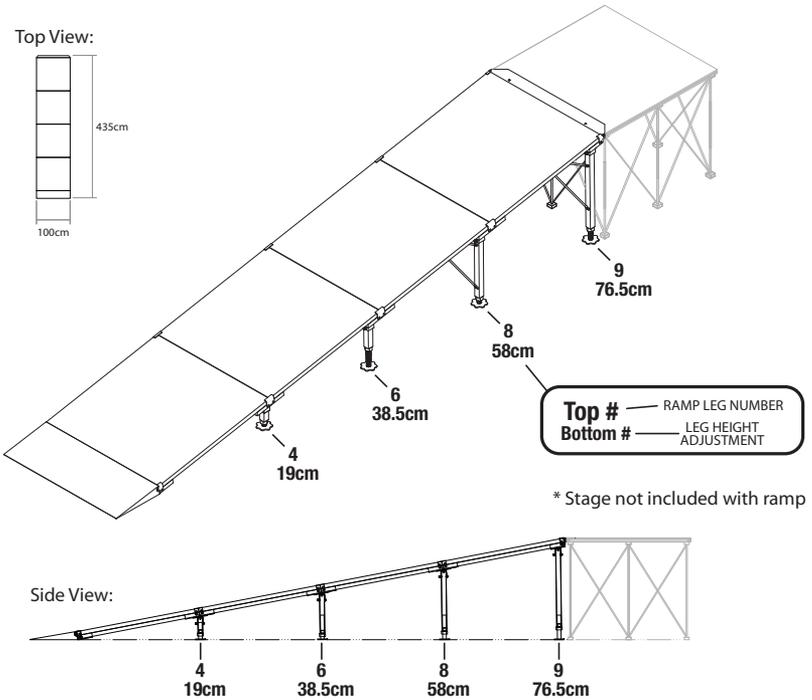


SKU	DESCRIPTION	PCS PER MASTER PACK	QTY IN SET
ISPE1X1CD or ISPE1X1TD or ISPE1X1ID	1 x 1mtr Carpet Finish Platforms 1 x 1mtr TuffCoat Finish Platforms 1 x 1mtr Industrial Finish Platforms	2	2
ISERBP	Bottom ramp plate with mounting hardware	1	1
ISERCP	Platform connecting plate	1	1
ISERPF	Metal platform assembly plate	1	4
IS2AL4	Two pack of equipment ramp adjustable leg # 4 with hardware	2	1
IS2AL6	Two pack of equipment ramp adjustable leg # 6 with hardware	2	1
IS2AL8	Two pack of equipment ramp adjustable leg # 8 with hardware	2	1
IS2AL9	Two pack of equipment ramp adjustable leg # 9 with hardware	2	1
ISELCB	Pack of cross bars for leg sets # 8 or 9	2	2

IS80RLC, IS80RLT, IS80RLI



Equipment Ramp with Landing for 80cm High Stages

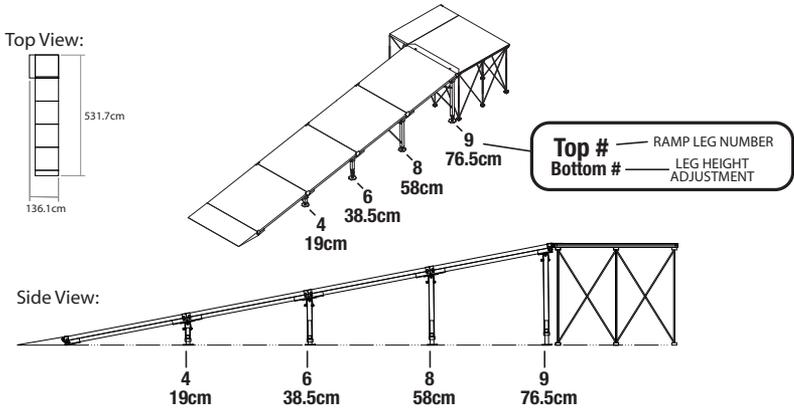


SKU	DESCRIPTION	PCS PER MASTER PACK	QTY IN SET
ISPE1X1CD or ISPE1X1TD or ISPE1X1ID	1 x 1mtr Carpet Finish Platforms 1 x 1mtr TuffCoat Finish Platforms 1 x 1mtr Industrial Finish Platforms	2	2
ISPE1X1CS or ISPE1X1TS or ISPE1X1IS	1 x 1mtr Carpet Finish Step Platform 1 x 1mtr TuffCoat Finish Step Platform 1 x 1mtr Industrial Finish Step Platform	1	1
ISSTEPEC or ISSTEPET or ISSTEPEI	Carpet Finish Step Platform TuffCoat Finish Step Platform Industrial Finish Step Platform	1	1
ISE1X1X80	80cm High Riser for 1 x 1mtr Platform	1	1
ISESTEP80	80cm High Riser for 1mtr Step Platform	1	1
ISERBP	Bottom ramp plate with mounting hardware	1	1
ISERCP	Platform connecting plate	1	1
ISERPF	Metal platform assembly plate	1	4
IS2AL4	Two pack of equipment ramp adjustable leg # 4 with hardware	2	1
IS2AL6	Two pack of equipment ramp adjustable leg # 6 with hardware	2	1
IS2AL8	Two pack of equipment ramp adjustable leg # 8 with hardware	2	1
IS2AL9	Two pack of equipment ramp adjustable leg # 9 with hardware	2	1
ISELCB	Pack of cross bars for leg sets # 8 or 9	2	2

IS80RCGR, IS80RTGR, IS80RIGR



Equipment Ramp with Guard Rails for 80cm High Stages

guardrails not shown

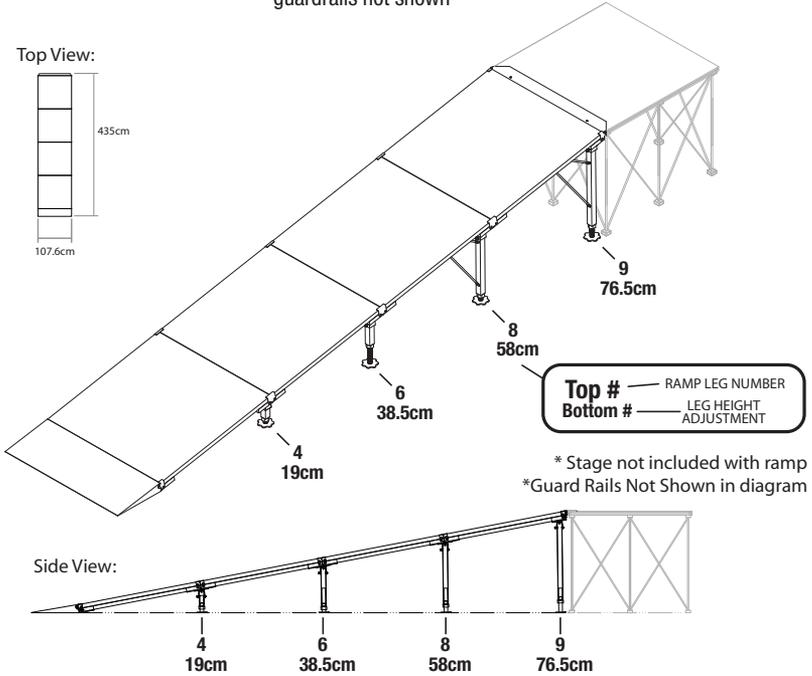


SKU	DESCRIPTION	PCS PER MASTER PACK	QTY IN SET
ISPE1X1CD or ISPE1X1TD or ISPE1X1ID	1 x 1mtr Carpet Finish Platforms 1 x 1mtr TuffCoat Finish Platforms 1 x 1mtr Industrial Finish Platforms	2	2
ISERBP	Bottom ramp plate with mounting hardware	1	1
ISERCP	Platform connecting plate	1	1
ISERPF	Metal platform assembly plate	1	4
IS2AL4	Two pack of equipment ramp adjustable leg # 4 with hardware	2	1
IS2AL6	Two pack of equipment ramp adjustable leg # 6 with hardware	2	1
IS2AL8	Two pack of equipment ramp adjustable leg # 8 with hardware	2	1
IS2AL9	Two pack of equipment ramp adjustable leg # 9 with hardware	2	1
ISELCB	Pack of cross bars for leg sets # 8 or 9	2	2
ISERGRPD	Two pack guard rail panels for ramps w/ mounting hardware	2	3
ISEARGRPD	Two pack adjustable ramp guard rail panels w/ mounting hardware	2	1

IS80RLCGR, IS80RLTGR, IS80RLIGR



Equipment Ramp with Guard Rails and Landing for 80cm High Stages

guardrails not shown

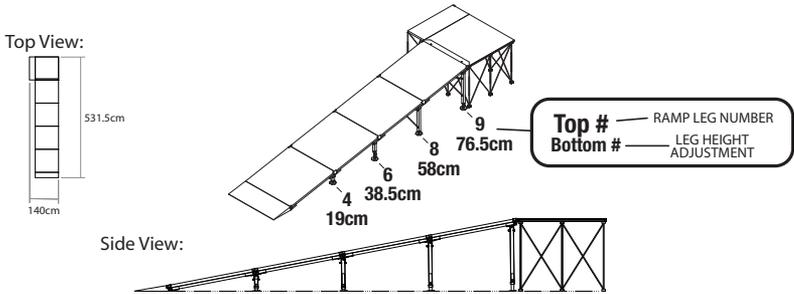


SKU	DESCRIPTION	PCS PER MASTER PACK	QTY IN SET
ISPE1X1CD or ISPE1X1TD or ISPE1X1ID	1 x 1mtr Carpet Finish Platforms 1 x 1mtr TuffCoat Finish Platforms 1 x 1mtr Industrial Finish Platforms	2	2
ISPE1X1CS or ISPE1X1TS or ISPE1X1IS	1 x 1mtr Carpet Finish Step Platform 1 x 1mtr TuffCoat Finish Step Platform 1 x 1mtr Industrial Finish Step Platform	1	1
ISSTEPEC or ISSTEPET or ISSTEPEI	Carpet Finish Step Platform TuffCoat Finish Step Platform Industrial Finish Step Platform	1	1
ISE1X1X80	80cm High Riser for 1 x 1mtr Platform	1	1
ISESTEP80	80cm High Riser for 1mtr Step Platform	1	1
ISERBP	Bottom ramp plate with mounting hardware	1	1
ISERCP	Platform connecting plate	1	1
ISERPF	Metal platform assembly plate	1	4
IS2AL4	Two pack of equipment ramp adjustable leg # 4 with hardware	2	1
IS2AL6	Two pack of equipment ramp adjustable leg # 6 with hardware	2	1
IS2AL8	Two pack of equipment ramp adjustable leg # 8 with hardware	2	1
IS2AL9	Two pack of equipment ramp adjustable leg # 9 with hardware	2	1
ISELCB	Pack of cross bars for leg sets # 8 or 9	2	2
ISERSTEPGRPD	Two pack of step ramp guard rail panels w/ mounting hardware	2	1
ISERGRPD	Two pack guard rail panels for ramps w/ mounting hardware	2	4
ISEARGRPD	Two pack adjustable ramp guard rail panels w/ mounting hardware	2	1
IS2CMB	Two pack of guard rail panel corner mounting bracket	2	1

IS80RWC, IS80RWT, IS80RWI



Straight Wheelchair Ramp for 80cm High Stages

Wheelchair ramps include guardrails (not shown)

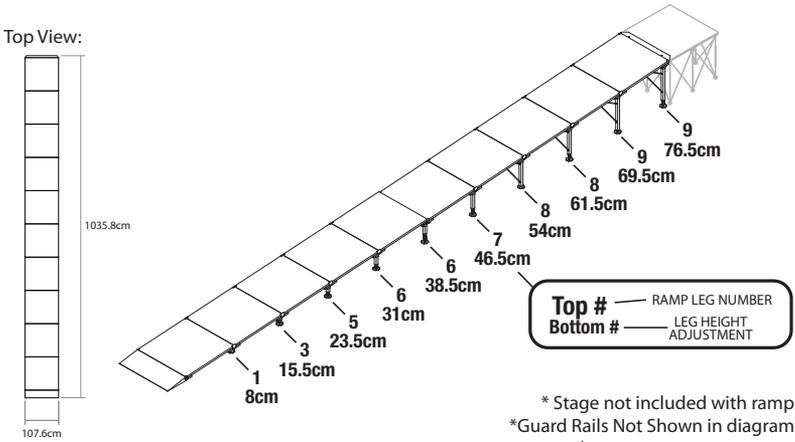

* Stage not included with ramp
*Guard Rails Not Shown in diagram

Side View:

SKU	DESCRIPTION	PCS PER MASTER PACK	QTY IN SET
ISPE1X1CD or ISPE1X1TD or ISPE1X1ID	1 x 1mtr Carpet Finish Platforms 1 x 1mtr TuffCoat Finish Platforms 1 x 1mtr Industrial Finish Platforms	2	5
ISERBP	Bottom ramp plate with mounting hardware	1	1
ISERCP	Platform connecting plate	1	1
ISERPF	Metal platform assembly plate	1	10
IS2AL1	Two pack of equipment ramp adjustable leg # 1 with hardware	2	1
IS2AL3	Two pack of equipment ramp adjustable leg # 3 with hardware	2	1
IS2AL5	Two pack of equipment ramp adjustable leg # 5 with hardware	2	1
IS2AL6	Two pack of equipment ramp adjustable leg # 6 with hardware	2	2
IS2AL7	Two pack of equipment ramp adjustable leg # 7 with hardware	2	1
IS2AL8	Two pack of equipment ramp adjustable leg # 8 with hardware	2	2
IS2AL9	Two pack of equipment ramp adjustable leg # 9 with hardware	2	2
ISERGRPD	Two pack guard rail panels for ramps w/ mounting hardware	2	9
ISEARGRPD	Two pack adjustable ramp guard rail panels w/ mounting hardware	2	1
ISELCB	Pack of cross bars for leg sets # 8 or 9	2	4


IS80RLWC, IS80RLWT, IS80RLWI



Wheelchair Ramp with Landing for 80cm High Stages

Wheelchair ramps include guardrails (not shown)

Top View:

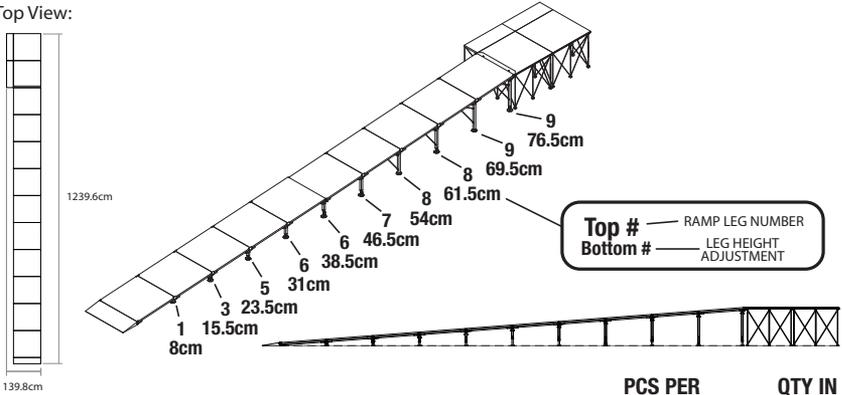


SKU	DESCRIPTION	PCS PER MASTER PACK	QTY IN SET
ISPE1X1CD or ISPE1X1TD or ISPE1X1ID	1 x 1mtr Carpet Finish Platforms 1 x 1mtr TuffCoat Finish Platforms 1 x 1mtr Industrial Finish Platforms	2	6
ISSTEPEC or ISSTEPET or ISSTEPEI	1 x 1mtr Carpet Finish Platform 1 x 1mtr TuffCoat Finish Platform 1 x 1mtr Industrial Finish Platform	1	2
ISE1X1X80	80cm High Riser for 1 m x 1m Platform	1	2
ISESTEP80	80cm High Riser for 1mtr Step Platform	1	2
ISERBP	Bottom ramp plate with mounting hardware	1	1
ISERCP	Platform connecting plate	1	1
ISERPF	Metal platform assembly plate	1	10
IS2AL1	Two pack of equipment ramp adjustable leg # 1 with hardware	2	1
IS2AL3	Two pack of equipment ramp adjustable leg # 3 with hardware	2	1
IS2AL5	Two pack of equipment ramp adjustable leg # 5 with hardware	2	1
IS2AL6	Two pack of equipment ramp adjustable leg # 6 with hardware	2	2
IS2AL7	Two pack of equipment ramp adjustable leg # 7 with hardware	2	1
IS2AL8	Two pack of equipment ramp adjustable leg # 8 with hardware	2	2
IS2AL9	Two pack of equipment ramp adjustable leg # 9 with hardware	2	2
ISERGRPD	Two pack guard rail panels for ramps w/ mounting hardware	2	11
ISEARGRPD	Two pack adjustable ramp guard rail panels w/ mounting hardware	2	1
ISELCB	Pack of cross bars for leg sets # 8 or 9	2	3
IS2CMB	Two pack of guard rail panel corner mounting bracket	2	1

IS80RSBWC, IS80RSBWT, IS80RSBWI



Switch Back Wheelchair Ramp for 80cm High Stages

Wheelchair ramps include guardrails (not shown)

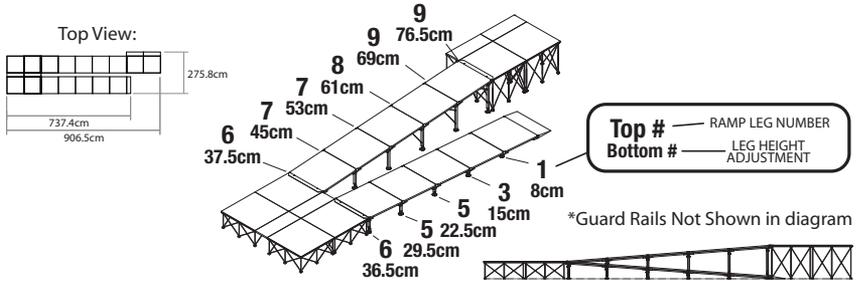


SKU	DESCRIPTION	PCS PER MASTER PACK	QTY IN SET
ISPE1X1CD or ISPE1X1TD or ISPE1X1ID	1 x 1mtr Carpet Finish Platforms 1 x 1mtr TuffCoat Finish Platforms 1 x 1mtr Industrial Finish Platforms	2	8
ISSTEPEC or ISSTEPET or ISSTEPEI	1 x 1mtr Carpet Finish Platform 1 x 1mtr TuffCoat Finish Platform 1 x 1mtr Industrial Finish Platform	1	4
ISE1X1X40	40cm High Riser for 1 m x 1m Platform	1	4
ISESTEP40	40cm High Riser for 1mtr Step Platform	1	2
ISE1X1X80	80cm High Riser for 1 m x 1m Platform	1	2
ISESTEP80	80cm High Riser for 1mtr Step Platform	1	2
ISERBP	Bottom ramp plate with mounting hardware	1	1
ISERCP	Platform connecting plate	1	3
ISERPF	Metal platform assembly plate	1	10
IS2AL1	Two pack of equipment ramp adjustable leg # 1 with hardware	2	1
IS2AL3	Two pack of equipment ramp adjustable leg # 3 with hardware	2	1
IS2AL5	Two pack of equipment ramp adjustable leg # 5 with hardware	2	2
IS2AL6	Two pack of equipment ramp adjustable leg # 6 with hardware	2	2
IS2AL7	Two pack of equipment ramp adjustable leg # 7 with hardware	2	2
IS2AL8	Two pack of equipment ramp adjustable leg # 8 with hardware	2	1
IS2AL9	Two pack of equipment ramp adjustable leg # 9 with hardware	2	2
ISERGRPD	Two pack guard rail panels for ramps w/ mounting hardware	2	11
ISEARGRPD	Two pack adjustable ramp guard rail panels w/ mounting hardware	2	3
IS2ESTEPGRP	Two pack of step guard rail panels w/ mounting hardware	2	2
ISELCB	Pack of cross bars for leg sets # 8 or 9	2	3
IS2CMB	Two pack of guard rail panel corner mounting bracket	2	3

IS80R90WC, IS80R90WT, IS80R90WI



90 Degree Turn Wheelchair Ramp for 80cm High Stages

Wheelchair ramps include guardrails (not shown)

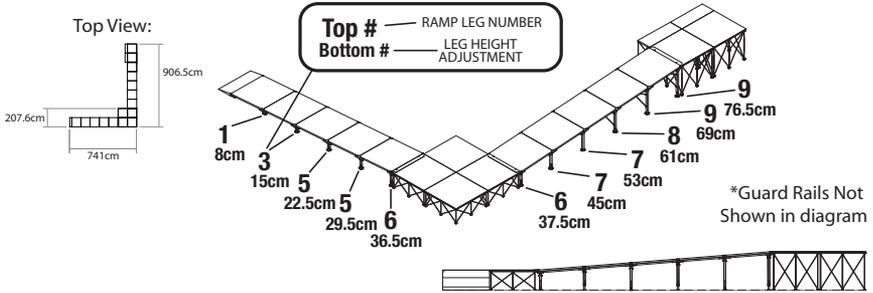

SKU	DESCRIPTION	PCS PER MASTER PACK	QTY IN SET
ISPE1X1CD or ISPE1X1TD or ISPE1X1ID	1 x 1mtr Carpet Finish Platforms 1 x 1mtr TuffCoat Finish Platforms 1 x 1mtr Industrial Finish Platforms	2	8
ISSTEPEC or ISSTEPET or ISSTEPEI	1 x 1mtr Carpet Finish Platform 1 x 1mtr TuffCoat Finish Platform 1 x 1mtr Industrial Finish Platform	1	2
ISE1X1X40	40cm High Riser for 1 m x 1m Platform	1	4
ISE1X1X80	80cm High Riser for 1 m x 1m Platform	1	2
ISESTEP80	80cm High Riser for 1mtr Step Platform	1	2
ISERBP	Bottom ramp plate with mounting hardware	1	1
ISERCP	Platform connecting plate	1	3
ISERPF	Metal platform assembly plate	1	10
IS2AL1	Two pack of equipment ramp adjustable leg # 1 with hardware	2	1
IS2AL3	Two pack of equipment ramp adjustable leg # 3 with hardware	2	1
IS2AL5	Two pack of equipment ramp adjustable leg # 5 with hardware	2	2
IS2AL6	Two pack of equipment ramp adjustable leg # 6 with hardware	2	2
IS2AL7	Two pack of equipment ramp adjustable leg # 7 with hardware	2	2
IS2AL8	Two pack of equipment ramp adjustable leg # 8 with hardware	2	1
IS2AL9	Two pack of equipment ramp adjustable leg # 9 with hardware	2	2
ISERGRPD	Two pack guard rail panels for ramps w/ mounting hardware	2	12
ISEARGRPD	Two pack adjustable ramp guard rail panels w/ mounting hardware	2	3
IS2ESTEPGRP	Two pack of step guard rail panels w/ mounting hardware	2	2
ISELCB	Pack of cross bars for leg sets # 8 or 9	2	3
IS2AMP	Two pack of ramp assembly plates	2	2

Individual Ramp Components (EURO)

Platforms

ISSTEPEC	1 Meter Long Carpet Finish Step Platform
ISPSTEPET	1 Meter Long Tuffcoat Finish Step Platform
ISSTEPEI	1 Meter Long Industrial Finish Step Platform
ISPE1X1CD	1m x 1m Carpet Finished Platforms (two pack)
ISPE1X1CS	1m x 1m Carpet Finish Platform (single pack)
ISPE1X1TD	1m x 1m Tuffcoat Finished Platforms (two pack)
ISPE1X1TS	1m x 1m Tuffcoat Finish Platform (single pack)
ISPE1X1ID	1m x 1m Industrial Finished Platforms (two pack)
ISPE1X1IS	1m x 1m Industrial Finish Platform (single pack)

Risers

ISE1X1X20	20cm High Riser for 1 m x 1m Platform
ISE1X1X40	40cm High Riser for 1 m x 1m Platform
ISE1X1X60	60cm High Riser for 1 m x 1m Platform
ISE1X1X80	80cm High Riser for 1 m x 1m Platform
ISESTEP20	20cm High Riser for 1 m Step
ISESTEP40	40cm High Riser for 1 m Step
ISESTEP60	60cm High Riser for 1 m Step
ISESTEP80	80cm High Riser for 1 m Step

Ramp Frames and Components

ISERPF	Euro ramp platform frame
ISERBP	Euro bottom ramp plate with mounting hardware
ISERCP	Euro platform connecting plate

Ramp Legs

IS2AL1S	Two pack of equipment ramp small, fixed leg with hardware
IS2AL1	Two pack of equipment ramp adjustable leg # 1 with hardware
IS2AL2	Two pack of equipment ramp adjustable leg # 2 with hardware
IS2AL3	Two pack of equipment ramp adjustable leg # 3 with hardware
IS2AL4	Two pack of equipment ramp adjustable leg # 4 with hardware
IS2AL5	Two pack of equipment ramp adjustable leg # 5 with hardware
IS2AL6	Two pack of equipment ramp adjustable leg # 6 with hardware
IS2AL7	Two pack of equipment ramp adjustable leg # 7 with hardware
IS2AL8	Two pack of equipment ramp adjustable leg # 8 with hardware
IS2AL9	Two pack of equipment ramp adjustable leg # 9 with hardware
ISELCB	Pack of cross bars for legs # 8 or 9

Guard Rails

ISERGRPD	Two pack guard rail panels for 1m ramps w/ mounting hardware
ISERSTEPGRPD	Two pack of step guard rail ramp panels w/ mounting hardware
ISEARGRPD	Two pack adjustable ramp guard rail panels w/ mounting hardware
IS2CMB	Two pack of guard rail panel corner mounting brackets

Ramp Transportation Systems (optional)

Caster Boards



ISE1CB - Perfect for large ramp systems, our caster board is capable of holding up to 36 1x1mtr platforms or ramp frames (can also support ramp connecting plates and legs).

Guardrail Trolley



ISTROLLEY - The multi-purpose trolley can transport either guard rails, platforms or ramp frames and legs. The ISTROLLEY is capable of supporting either 10 platforms, 12 guard rails, or 12 ramp frames.

**CONTACT AN INTELLISTAGE DEALER
OR VISIT WWW.INTELLISTAGE.COM TO
DISCUSS YOUR TRANSPORTATION NEEDS**

Limited 2 Year Warranty

Road Ready warrants to the original owner of each new **IntelliStage™** product, for a period of 2 years from the date of purchase, (provided that it is purchased at an Authorized **IntelliStage™** Dealer) that is free of defects in materials and workmanship and that each product meets or exceeds all factory published specifications. This warranty is void if the product has been tampered with or misused beyond reasonable wear, and shall not apply if the product has been physically damaged. Improper handling, set-up or use of this unit could cause it to fail which could lead to serious injury or death. Please be sure to read, understand and follow all operating instructions and weight load information in this manual before using this product. Do not allow children or untrained persons to use this product. There are no obligations of liability on the part of Road Ready for any personal injuries, death, consequential damage or any other indirect damages with respect to, loss of property, revenues, profit or costs of removals, installations or re-installations arising out of, or in connection with, the use or performance of an **IntelliStage™** product.



IntelliStage™

12662 Corral Place ★ Santa Fe Springs CA 90670

Ph: 562.906.6185 ★ Fax: 562.906.6186

Email: usa@IntelliStage.com ★ www.IntelliStage.com